



UG-3287 Instruction Manual

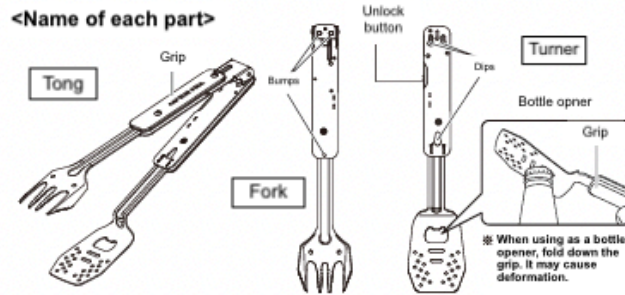


<Detaching>

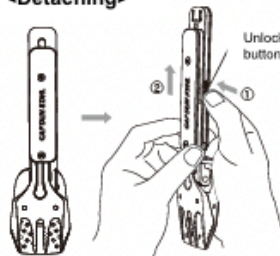


Slide the fork up and remove it while pushing the unlock button on the grip of the turner

<How to use the fork and turner>

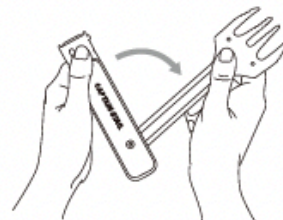


Slide the fork and turner tip in the direction of the arrow to the end. For stowing, reverse the procedure.

<How to use the tong>

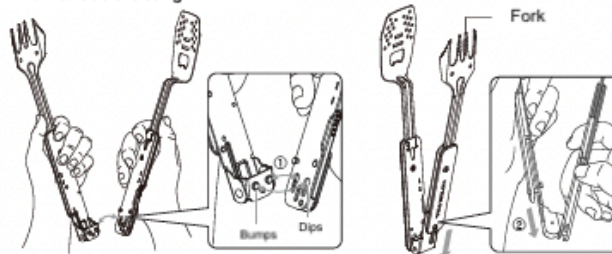

Insert the bumps of the fork into the dips of the turner and slide the fork side down while pressing the lock release button to fix it in place. For storage, slide the fork side up while pressing the unlock button to remove it.

<How to Stow>

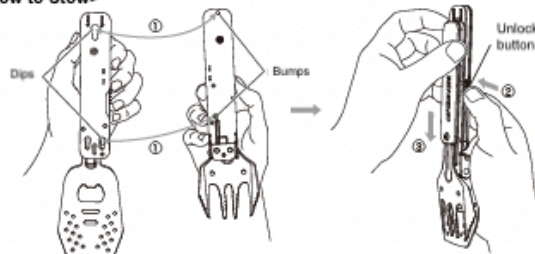

Overlap the bumps of the fork and the dips of the turner and press them together. While pressing the unlock button, slide the fork down and release the button to lock it

⚠ Warning Misuse could result in injury to the user and/or damage to property

- Before use, please wash the product with mild detergent with a soft sponge or cloth.
- After use, wash the product with a neutral detergent and a soft sponge. Then wipe it with soft dry cloth and store it away from high temperatures, high humidity, and direct sunlight.
- Do not use in commercial facilities or in the rental industry. We cannot be responsible for the use of this product by an unspecified number of people.
- Please understand that we are not responsible for any failure, damage deterioration, damage, accident, etc. caused by lending by rental, resale by auction, used sale, transfer or etc.
- Do not use for any purpose other than the intended use.
- Keep out of reach of children.
- Be careful of surrounding hazards and burns when using this product.
- Do not leave near fire or on heated grate, etc.
- When using the product, be careful not to injure yourself on any component of the product.
- Keep out of reach of children.
- Do not use in a dishwasher.
- After use, wipe off any dirt or moisture, dry the product well, and store it in a dry indoor location.
- Do not use steel scrubbers, polish, bleach, etc. when cleaning.
- Do not use in a dishwasher.



dishwasher