

M-6420 Instruction Manual

Assembly insuruction

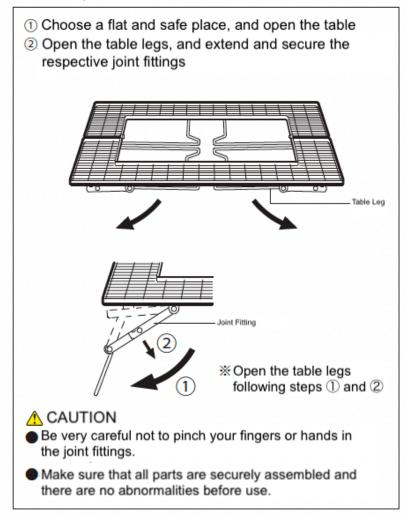

Storage Instruction

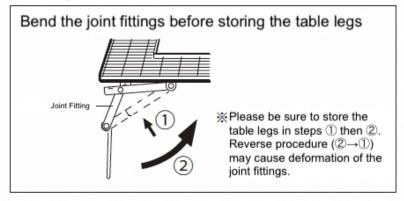

\land Danger

Misuse could easily result in a serious accident or death

SAFETY FIRST

Sharp Edges Watch Your

Fingers

• Never use the product in places where the use or handling of fire is prohibited. •Do not use the product on uneven or uneven surfaces, on slopes, in sandy or muddy areas, or in other soft or slippery places. •Do not use the product near houses or tents, in or near tarps, on decks, or around sheets. •Do not use in the presence of flammable materials such as dead trees and dead grass. It may result in fire or burns. •Make sure that the fire does not directly touch the inner frame. •Always place the fire grill in the center of the table with good stability. •Do not hang a load over the load capacity (approx. 4kg, even weight distribution). •Do not swing, lean on, or hang your body on the frame with your hands. •The frame and other components may become hot due to high temperatures in the body and surroundings. Be careful to avoid burns and other hazards. Please be especially careful when infants and children are present. •Do not cover the table with tablecloths or other flammable materials. •Do not place flammable materials (paper, plastic, etc.) or flammable items (spray cans, gas containers, etc.) around the tables and stove. •Do not carry or move the table while in use. Also, always check the safety of the surrounding area and do not leave the area. •After use, allow the table to cool completely by leaving it to cool naturally before cleaning up.



Misuse could result in injury to the user and/or damage to property

•Never sit or climb on the table. •Do not hang a load at the joints (center) or edges of the table or in one place. •Never use the product with any modifications or alterations. •Do not use the product for any purpose other than the intended use. •Keep away from direct sunlight, fire or heat for long periods of time. •Do not place heated pots, kettles, Dutch ovens, etc. directly on the table. Also, do not pour hot water over the table. •Do not throw, drop, hit or otherwise impact the product. •Do not place, leave, or store the product permanently in direct sunlight or in a place exposed to rain or wind (outdoors, under the eaves, on a balcony, etc.). •Inspect each time before use. Do not use the product if it is deformed or damaged, or if the deck is cracked or broken. •Be very careful not to pinch fingers or hands. Take special care when children are present. •For safety reasons, do not allow children to assemble or store the product. •Do not use the product directly on wooden flooring or other floor surfaces, as it may scratch the floor surface.